 


Operation & Maintenance Manual

GGT CARE PRO

71", 87", & 98"

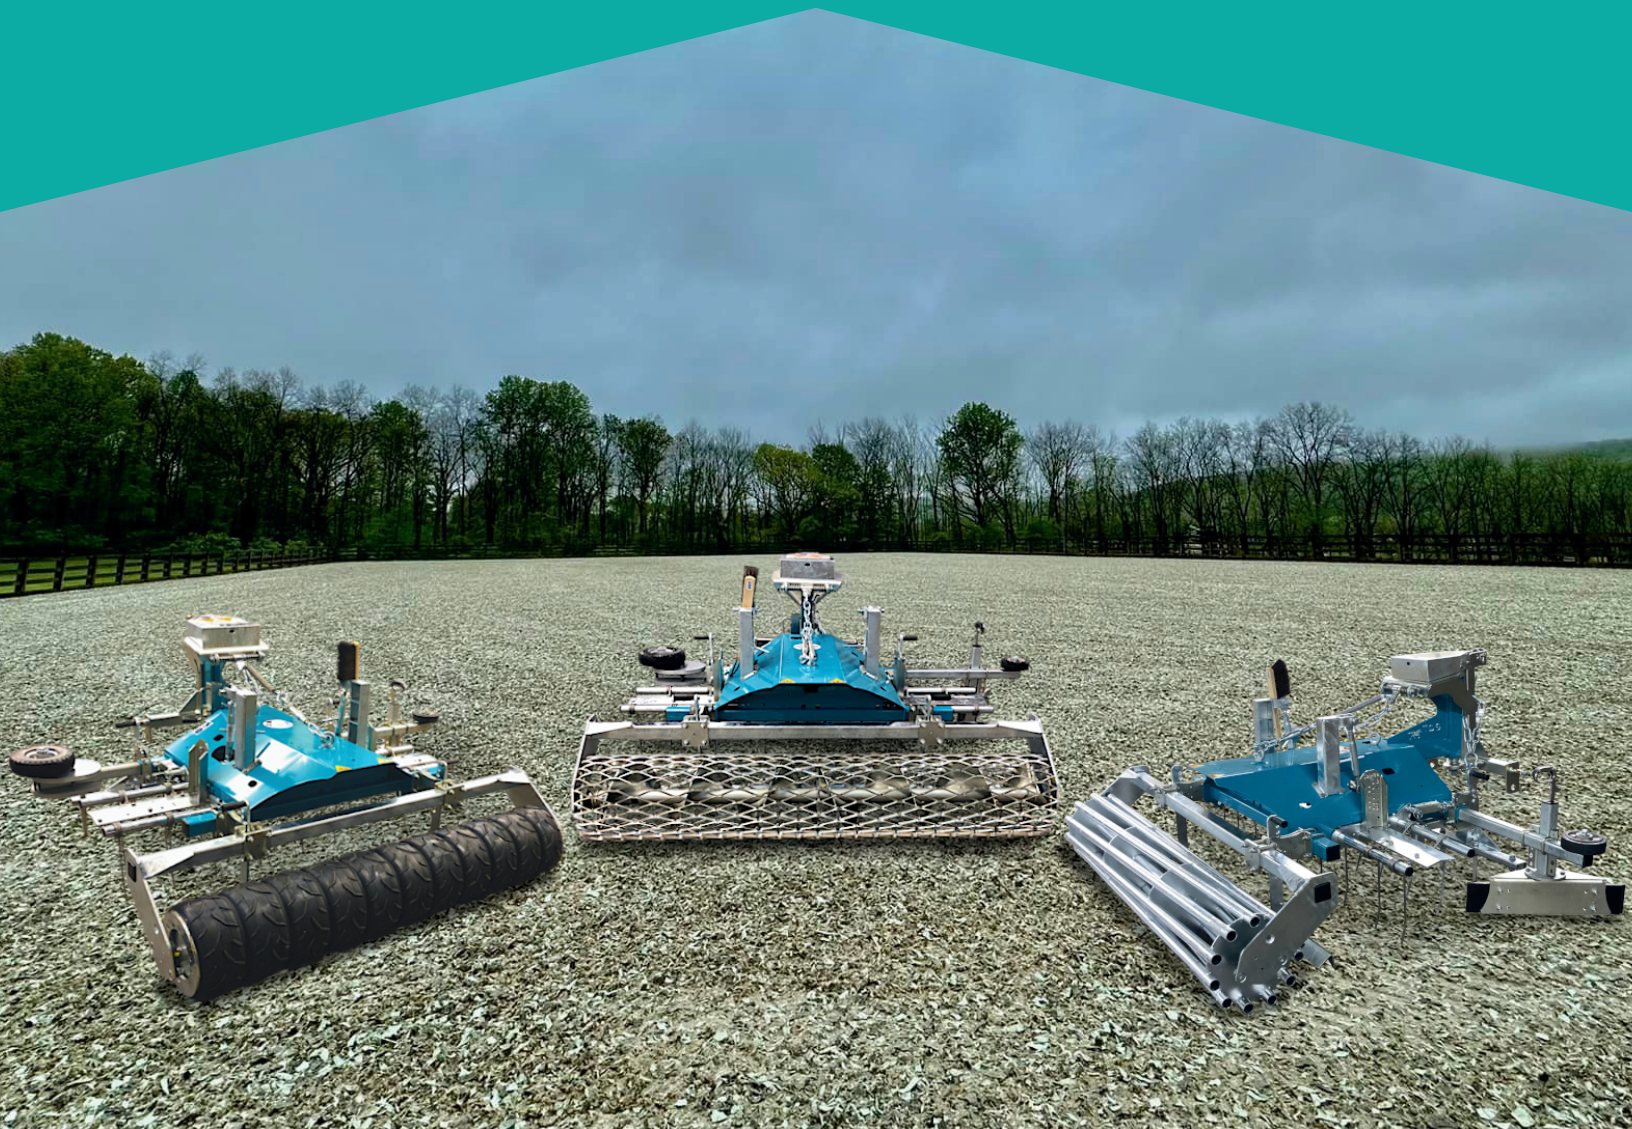

GGT Care Pro

The purpose of this manual is to give all information needed to safely operate GGT Footing Arena Conditioner. Please read entire contents before using the machine. Failure to do so may result in injury to the operator and/or equipment.

In addition to the safety aspects included in this instruction manual, the following aspects apply:

- General safety instruction
- USA-specific regulations

Safety Symbols

Safety symbols have been placed in visible places on the machine. Damaged or unreadable symbols **MUST** be replaced.



This symbol has been placed on the box of the machine behind the engine. Read instructions carefully before working with or on the ATV Basic!



Attention Crushing



Attention Heavy Roller & Rotating Parts



Maximum Speed

GGT Care Pro Safety

The GGT Care Pro Arena Conditioner has been built according to the latest regulations. However, threat to people and machine can still occur if:

- the machine is not used as described in the instructions.
- the machine is used by unqualified or uninstructed individuals.
- unauthorized changes to the machine have been made.
- the safety aspects are not followed.

General Safety Warnings

- DO NOT stand next to the GGT Care Pro during operation.
- Riding on the machine is strictly prohibited.
- Never place yourself in the swing area, fatal danger may occur.
- Secure conditioner against rolling before leaving the machine.
- Eye protection **MUST** be worn at all times.
- DO NOT wear loose fitting clothes and footwear must be worn at all times.
- ALL maintenance work, repairs, and/or troubleshooting **MUST** be completed by a qualified technician.
- When leaving the tractor, the device must be lowered

Emergency Situations

 
In case of an emergency where danger exists for humans, animals, or machine, the operator must stop the towing device and shut off engine.

Safety Guidelines

- The operator **MUST** obey all safety aspects, diagrams in this instruction manual, and safety symbols on the machine at **ALL TIMES**.
- While working with the conditioner, the operator must make sure that he has a good overview of the terrain and the machine itself.
- Operator must remain alert and not become distracted while using the machine.
- **ALWAYS** check that no animals or people are within operating range.
- It is advised against to use the machine on hills with a slope of more than 10 degrees
- Use machine on private property only. **DO NOT** drive on streets or pavement.
- In the event of finding a defect, the operator is obligated to inform a technician immediately.
- Use caution when using the machine in adverse weather, such as icy, wet, or snowy conditions.

Conduct a detailed inspection for any damages to parts of the machine or machine itself.

GGT Care Pro Features

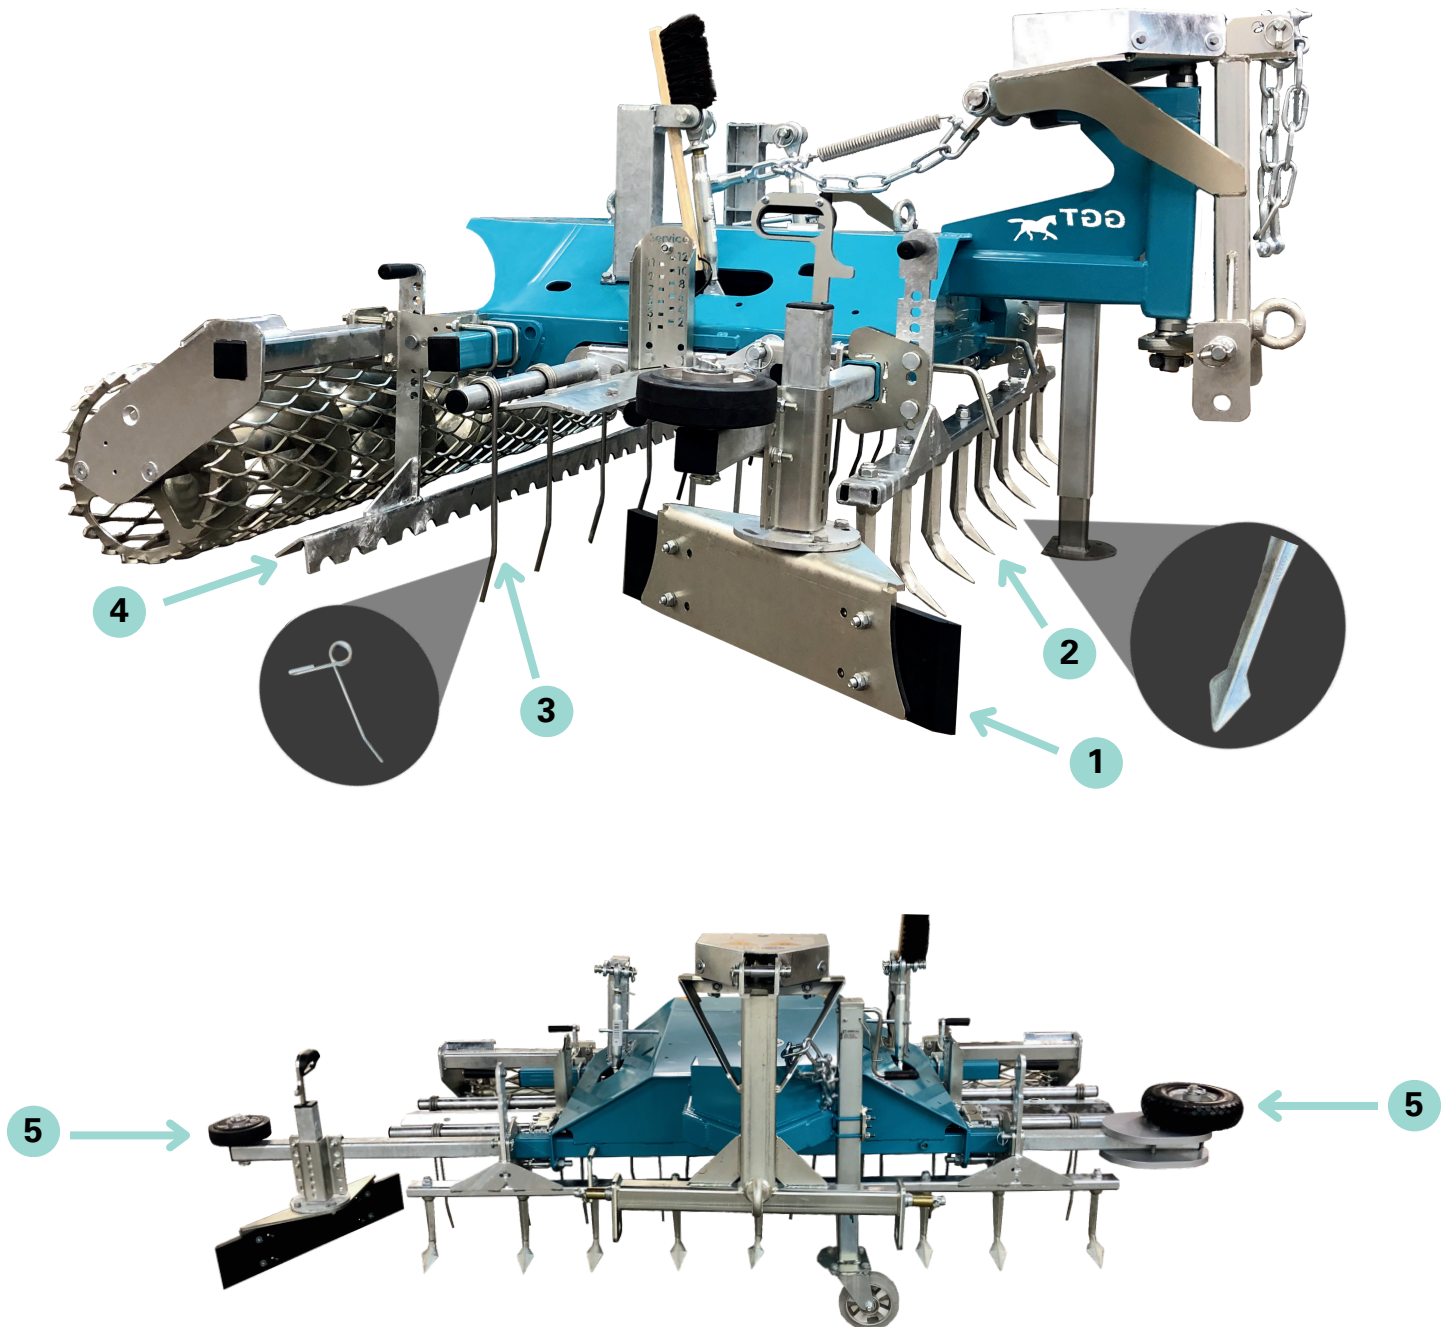


- 1: Track Clearer
- 2: Deep Loosening Teeth
- 3: Spring Tines
- 4: Leveling Bar
- 5: Dual Guide Wheels

GGT Care Pro Features



Mesh Roller

 - Recommended roller for optimal blending and distribution.
- Ensures a consistent and high-performance surface.
- Perfect for Jumping and Dressage arenas.

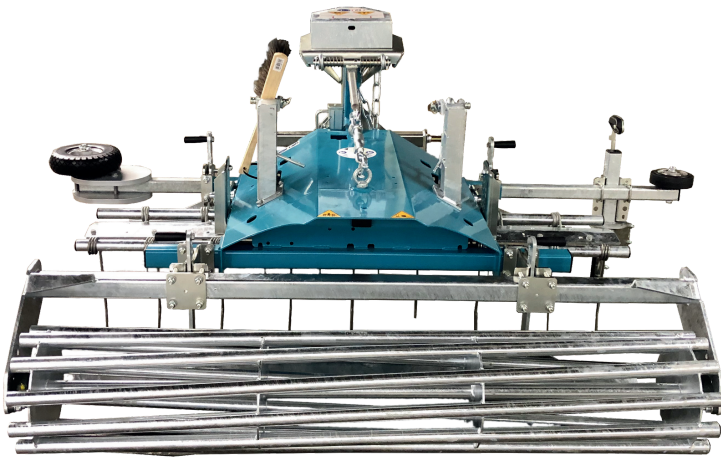

Bar Roller

- Enhances stability and compaction while preventing tines from penetrating too deeply into the surface.
- The twisted rod design ensures optimal packing, eliminates trailing, and reduces bounce
- Gives a smooth & more consistent finish.



Farm Flex Roller

 
 
- Used to stabilize, compact, & level footing for a consistent finish.
- Allows for optimal pacing and even distribution of footing and sand.



GGT Care Pro Safety

The arena conditioner undercarriage and/or digging device **MUST BE** retracted during setting and use. The undercarriage should be used only for parking of the leveler. (see fig. 1)


- Attach Arena Conditioner to pulling equipment by 3 point or ball hitch.
- Make sure the unit is level and use attached leveling circle on arena conditioner head.

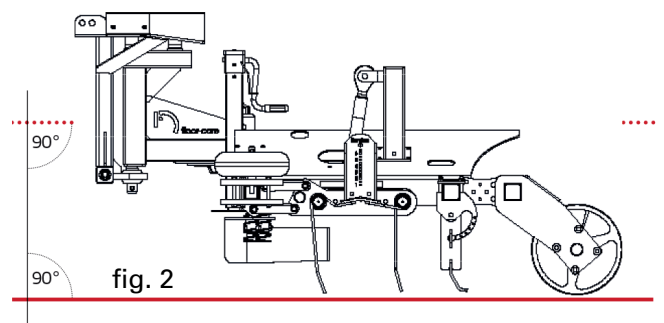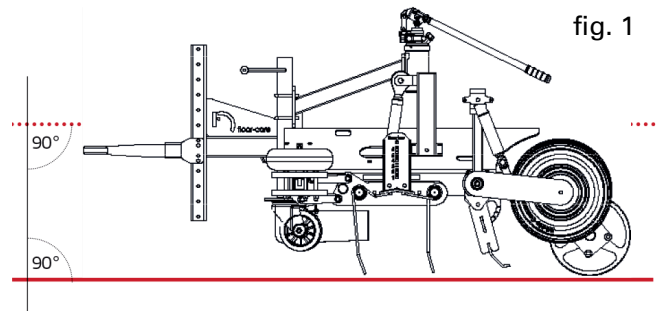

Raise the tines up or down by adjusting the turnbuckle. Make sure self-locking nuts are loosened before adjusting tines, and tightened again after making adjustments.

Caution! After adjustment tighten the clamping screw again.

 
By twisting the turnbuckle towards A the depth of the tines will be reduced. Twisting the turnbuckle towards B the depth of the tines will be maximized.

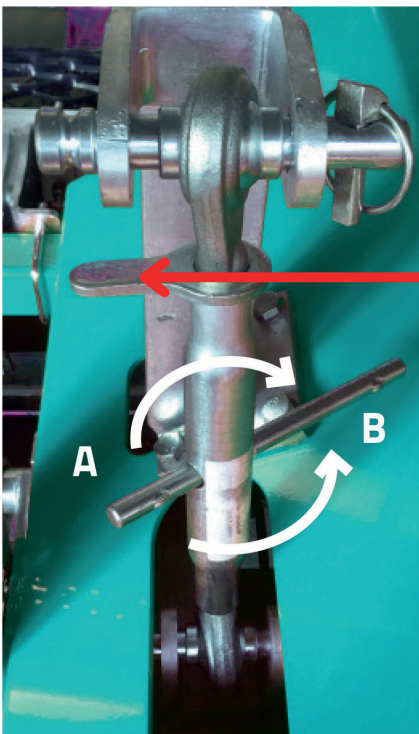

GGT Care Pro Safety

Use and handling of the Arena Conditioner in conjunction with the guide wheel.


 
Guide wheel can be adjusted in and out by loosening the locking pin. Once loose, slide guide wheel to desired position and tighten locking pin back down.

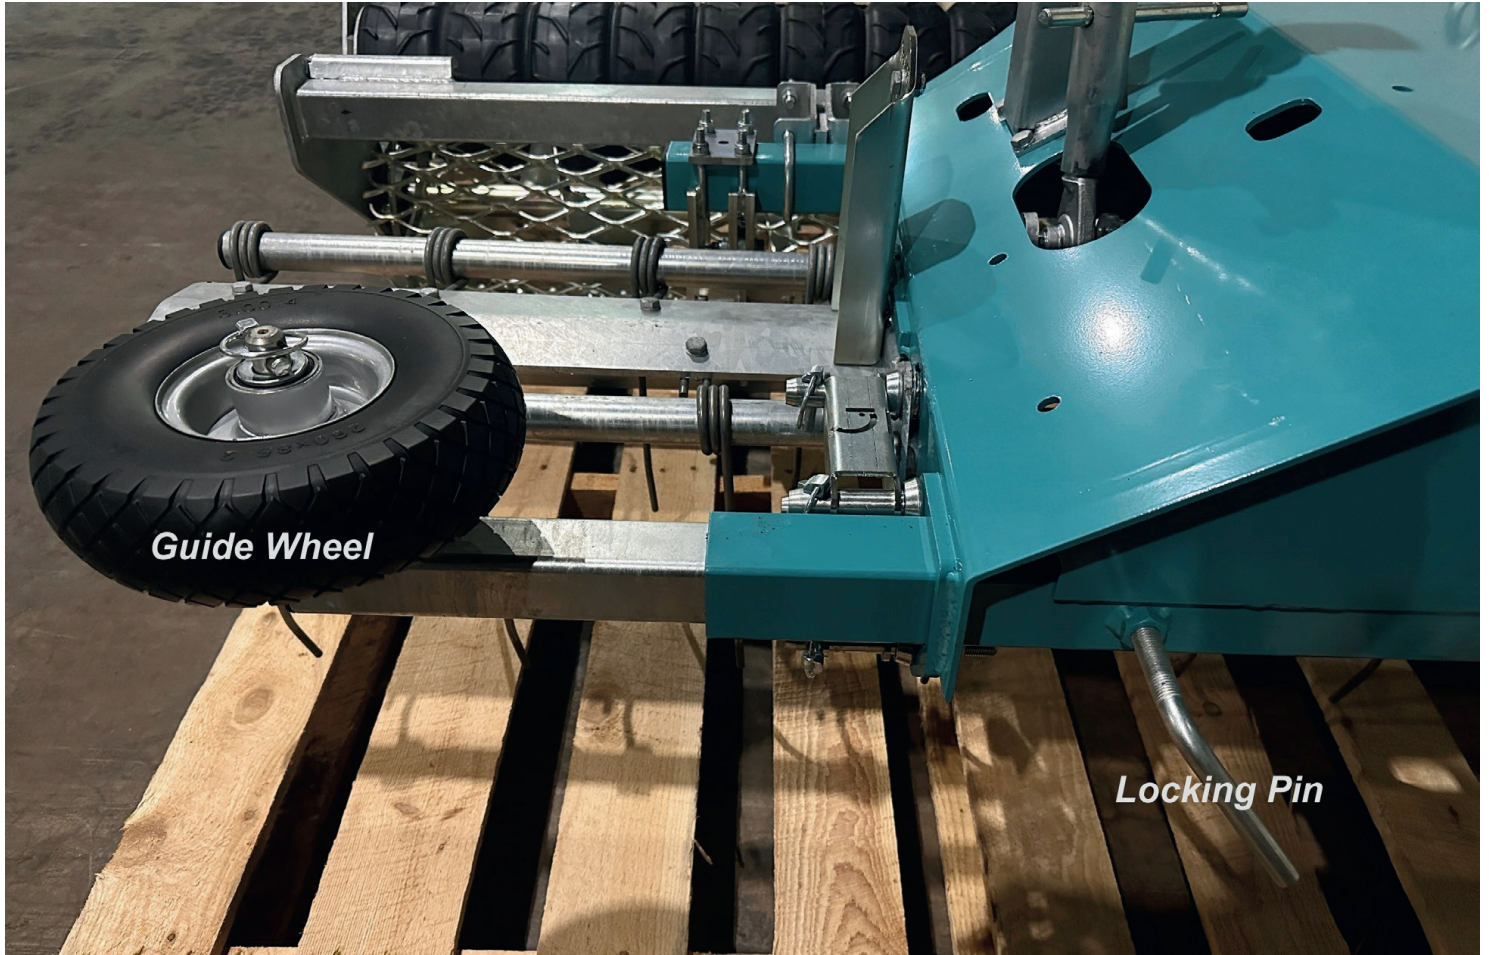


GGT Care Pro Maintenance

Regular care and maintenance are important for a long service lifetime and good working quality of the Care Pro Conditioner. Regular washing of the machine is also recommended to help with more efficient maintenance.

  Every 25 working hours, grease all points

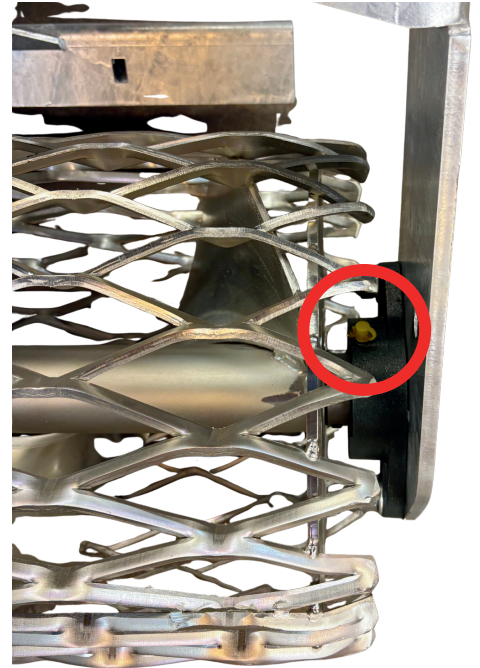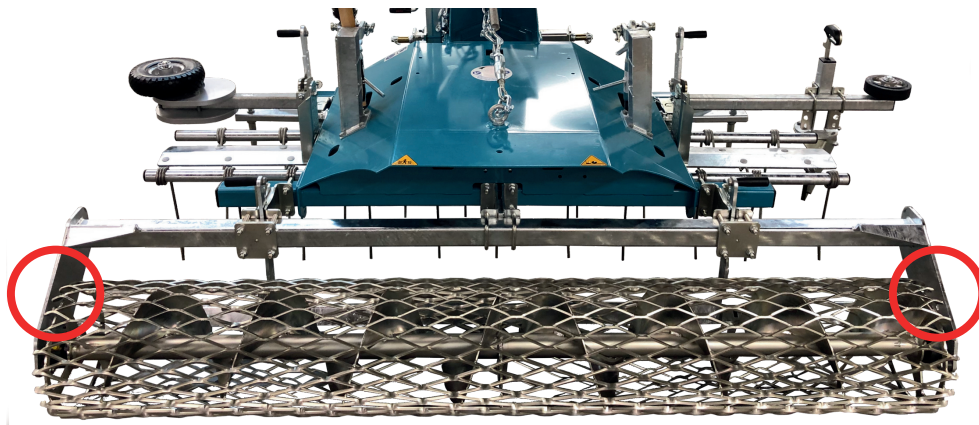

 Remove protective cover circled and marked # 2.

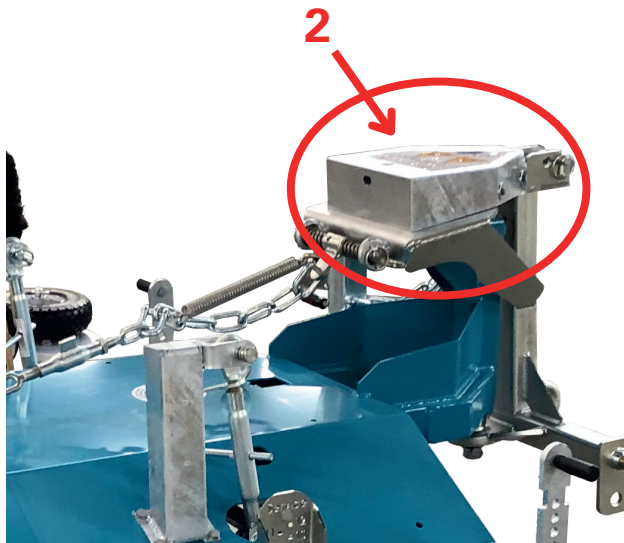

Remove the cotter pin, wear sleeve and grease the pins as shown below.



Inspect all parts and grease inlets visually every 12 weeks.

General Arena Maintenance

Driving Speed:

Operator must adjust driving speed so the Care Pro conditioner can smooth any unevenness from the soil. DO NOT drive too fast, the blade will not be deposited in the soil effectively and uneven surface cannot be graded.

The perfect speed is between 3 to 7 miles per hour. On wet surfaces you should move at 7 MPH and drive slower when surface is dry.

Please note: spring steel tines need an ideal speed to complete the job effectively. If not, the tines will start to whisk.



Driving Directions:

Driving direction is important to keep the ground level.

 
Always start with driving along outside lines as shown in fig. 1.

Start driving at the outside lines two times. Then towards the inner lines along the long side as wide as one track would be. If the ground is higher outside, you can push it back with the machine to the inner side when driving on the short side.

To grade waves in the ground, drive in spiral forms as shown in fig. 3.

- Vary the pattern each day to prevent soil compaction.
- Use caution to ensure the tines are not going too deep if your arena has a separation layer or base mats.
- Condition daily to smooth foot prints, remove ruts, & keep the surface leveled.


1.

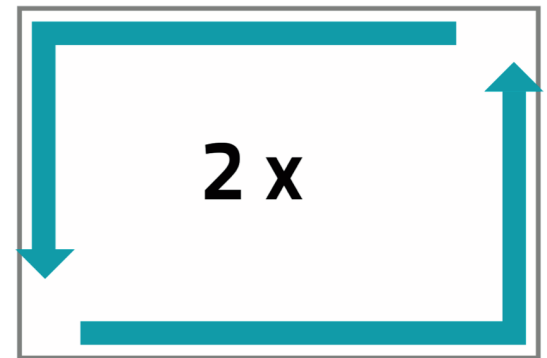

2.



 3.

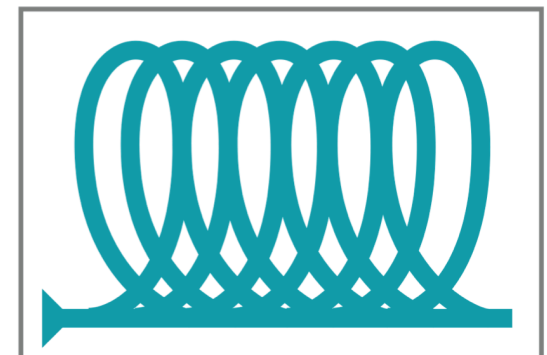



851 Simuel Road
Spartanburg, SC 29301
USA

Call: (864) - 579 - 4484



www.ggtfooting.com